


Ending a Call

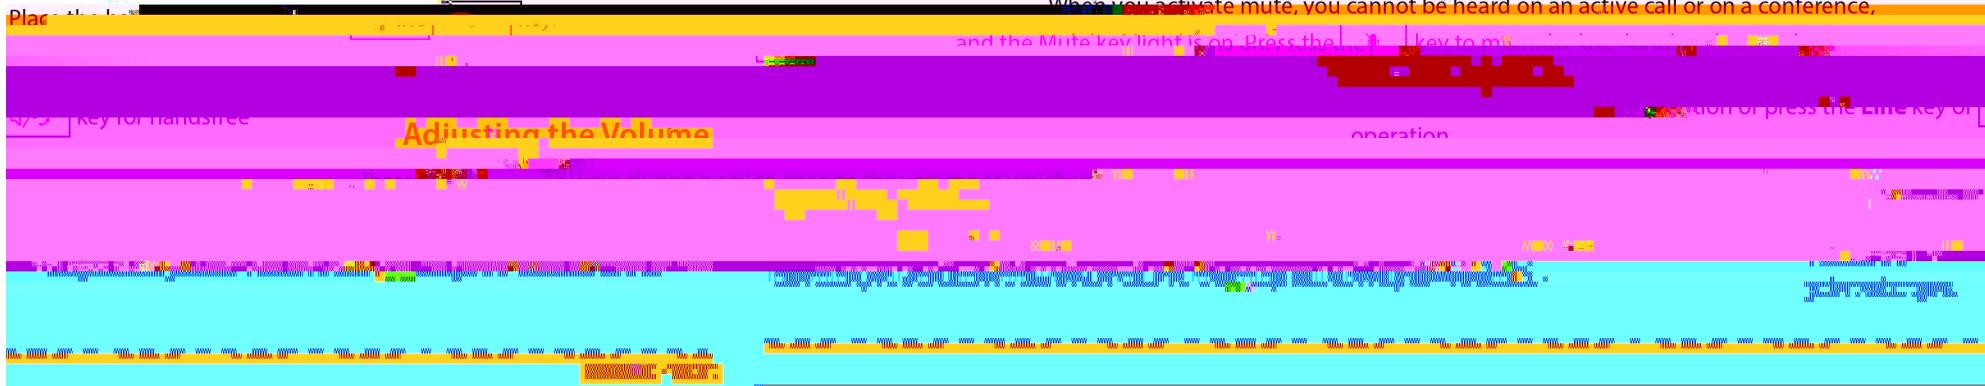

Muting

When you activate mute, you cannot be heard on an active call or on a conference,

and the Mute key light is on. Press the Mute key to mute yourself during a call or conference operation.

Adjusting the Volume





